

J

Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar
|´p´ñā´ćž.ñóĀúĥ´ëüÊìîÊžWμøp´ÆiüÆüGž!zā´ĆpĒaĥÊāžfūÊaÊÆÊāÁØüĒÀžЗапасные части - 备件



① Steuerung	Control unit	
1010/3 BWE		JP47285
1010/3, 101E/3		JP47286
102E/3, 102E/2		JP45786
103E/2		JP45787
② D 100 / D 100	D 100 / D 100	JP48871
③ Klemmflansch	Clamping flange	JP43713
④ Wartungsdeckel	Service lid	JP42798
⑤ Verschiebmuffe	Collar	JP47287
⑥ Behälter	Tank	JP44861
⑦ Steuerungsplatine	Control board	JP47304
⑧ Niveauerfassung	Level control	
3 m Leitung	3 m cable	JP43712
1E-m Leitung	1E-m cable	JP48227
⑨ Pumpenlüftung	Pump ventilation	JP43710
⑩ Auftriebssicherung	Anti floating	JP43709
⑪ Pumpe	Pump	
1010/3 BWE, 3 m		JP46754
1010/3 BWE, 1E-m		JP48684
1010/3		JP45778
101E/3		JP45779
102E/3		JP45780
102E/2		JP48826
103E/2		JP48827
⑫ Elast. Verbindung	Elastic connector	JP43705
⑬ Gehäuseklappe	Housing valve	JP46813
⑭ Flansch	Flange	JP43706
⑮ Doppelklappe	Duplex flap	JP46812
⑯ Basisplatte	Base plate	JP43714
⑰ Dichtband	Sealing tape	JP47966



	Leitung	Cable
7/4	JR43717	10/4, 15/4, 25/4
1/4 m	JR43721	1010/4 BWE
15 m	JR43885	1010/4 BWE
juse	Stator + Housing	(2) Stator + Gehä.
JR43722	1010/4 BWE	
JR43791	10/4, 15/4, 25/4	Rotorwelle Rotor shaft
JR43801	1010/4 BWE	
JR43802	10/4, 15/4, 25/4	
set JR43726	Lagersatz Bearing	
housing JR43720	Lagerschild Bearing	
JR43807	Dichtungssatz Seal set	
① Laufrad Laufräder		
JR43793	10/4	
JR43794	15/4	
JR43795	25/4	
② Schutzhaube		

UC 25/2 - 35/2

①	Leitung	Cable	JP43717
②			
